

GENERAL OPERATING INSTRUCTIONS

**USE SUPPLIED 4' HOSE TO CONNNECT TO THE AVAILABLE WATER SUPPLY
INLET ON THE DOCK-MATE**

!!!NOTE!!!

**YOU SHOULD NEVER CONNECT THIS OR ANY POTABLE WATER SUPPLY LINE
TO ANY WATER SUPPLY WITH UNKNOWN BIOLOGICAL CONTAMINATES!!!**

**TEST THE WATER FOR HARDNESS USING THE TEST KIT INCLUDED WITH
YOUR DOCK-MATE SYSTEM. SET YOUR METER TO THE APPROPRIATE
GALLONAGE
(THE METER CAN ONLY GO TO 1200 GALLONS MAY NEED TO RESET IF MORE
GALLONS IS NEEDED)**

**BASED ON THE HARDNESS OF THE FEED WATER,
REFER TO THE CAPACITY CHART TO DETERMINE THE TYPICAL NUMBER
OF GALLONS AVAILABLE BEFORE NEEDING TO BE RECHARGED.**

**FOR CONTINUED USE, TURN WATER SUPPLY ON AND EITHER FILL FRESH
WATER TANK OR WASH-DOWN VESSEL.**

**TO RECHARGE AND REGENERATE SYSTEM, ADD SALT TO THE BRINE
CARTRIDGE AND PLACE IN THE RECHARGE HOUSING**

(REMOVE YOUR SPRAY GUN DURING RECHARGE FOR OPEN FLOW)

**CONNECT THE HOUSING TO THE INLET IN BETWEEN THE
WATER SOURCE AND DOCK-MATE**

**RUN THE OUTLET SIDE OF THE SOFTENER TO AN APPROPRIATE
DRAIN OR FACING OVER DOCK**

AND TURN THE WATER ON

**THE YACHT-MATE RECHARGE HOUSING HAS A BUILT IN
FLOW CONTROL AT .5 GPM SO IT WILL BE A VERY SLOW FLOW
COMING OUT OF YOUR HOSE**

**LEAVE SYSTEM TO RUN UNTIL ALL THE SALT IS DISSOLVED.
THEN DISCONNECT RECHARGE HOUSING AND FLUSH UNIT WITH WATER
FOR 5-10 MINUTES TO REMOVE ANY CHLORIDES LEFT IN SYSTEM
THE UNIT IS READY TO USE AGAIN**